

GenTent® GTX Installation and Product Safety Manual

THANK YOU

The GenTent® Frame Extender (GTX), is an important accessory for use on very small generators and/or those generators whose frames have something attached that blocks the GenTent clamp from attaching. Please follow these simple instructions for installation.

PACKAGE CONTENTS

This package includes everything required to install a GTX on your portable generator:

- 1 – Product and Safety Manual
- 1 – GTX tube
- 2 – #10 Sheet metal screws

INSTALLATION OVERVIEW

The GTX installs in these easy steps:

Locate and mark: where the GTX will be installed.

Drill: Two holes for mounting the GTX.

Mount: Screw the GTX in place

Once the GTX is installed, follow the GenTent installation instructions.

TOOLS NEEDED

- Electric drill
- 9/64" drill bit
- 5/16" nut driver or flat blade screwdriver

Email: support@gentent.com
Telephone: 781-33G-TENT (774-334-8368)



IMPORTANT PRODUCT SAFETY

WARNING

Always shut generator off before GTX installation.

WARNING

Allow generator to cool prior to GTX installation.

WARNING

Never block or cover the generator exhaust muffler in any way.

INSTALLATION PROCEDURE

Locate the GTX on the generator frame:

- The top edge of the GTX should be installed on the lower spot on the frame between these two measurements
 - (1) 9" below where the gas tank meets the frame
 - (2) 1/2" above the bottom of the lowest electrical outlet on the electrical panel
- Position GTX against the frame member at the outer most corner (the point furthest away from either side of the generator) (Fig. C)
- Using the 9/64" drill bit, scratch a marker through the screw holes on the GTX (top and bottom)

Drill and install GTX:

- Drill two pilot holes, using the 9/64" drill bit, at the locations previously scratched/marked (Fig. A)
- Using 5/16" nut driver, or flat blade screwdriver (nut driver recommended), screw GTX to frame (Fig. B)



Fig. A

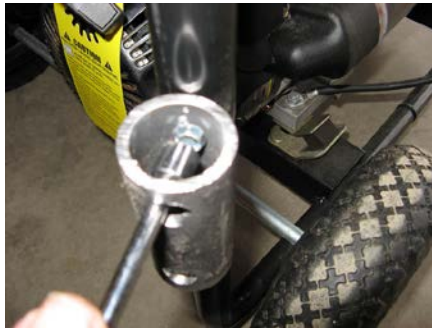


Fig. B



Fig. C

GenTent Clamp Installation notes:

- Install a GenTent rubber adapter onto the GTX before installing the GenTent clamp (Fig. D)
- Set the GenTent clamp rod one step in versus other clamps that are attached directly to the generator frame (for example, if your normal clamp pin setting is 2, set the clamp pin on the GTX side to 1)
- See GenTent™ Installation Instructions for clamp pin setting adjustment guide



Fig. D



Fig. E