



Generator Running Cover for Open Frame Portable Generators




Product Safety & Instruction Manual

Weatherproof Your Power™

TABLE OF CONTENTS

PACKAGE CONTENTS.....	2
UNIVERSAL CLAMP COMPONENTS.....	2
SETTING UP THE CLAMPS.....	3
INSTALLING THE GENTENT FRAME.....	4
COVERING THE GENTENT.....	5
INSTALLING THE ELECTRICAL PANEL.....	6
BLOCKED FRAME ADDENDUM.....	7


Package Contents

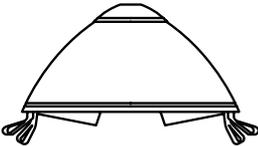

GenTent Canopy x1



Center Connector x1




Universal Clamp x4



Opaque Electrical Panel Apron x1




Fiberglass Frame Rods x4

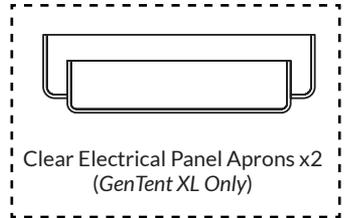


Clear Electrical Panel Aprons x2
(GenTent XL Only)

Universal Clamp Components

The GenTent Universal Clamp is a hinged mount system which will come preassembled and will not require any tools for mounting.

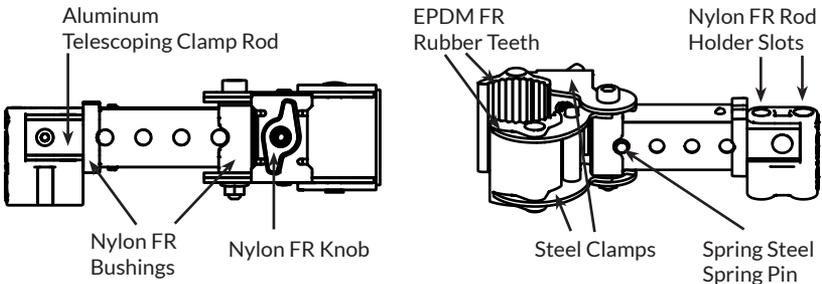

Step 1: Setting Up the Clamps

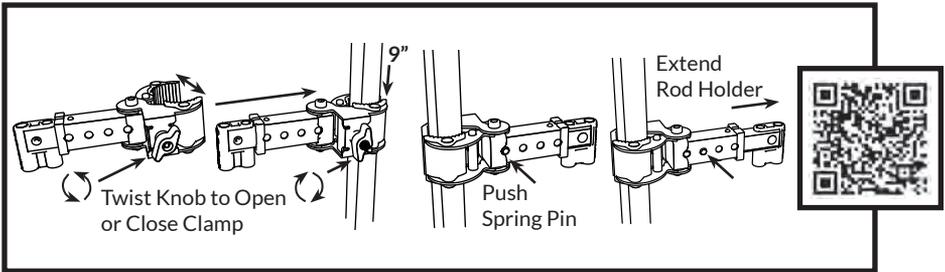

1. Begin by identifying the proper clamp mounting height. Position each clamp approximately 9 inches below the gas tank or 1/2 inch below the lowest electrical outlet, whichever is lower.
Do not install clamps in front of the exhaust outlet.
2. Loosen the clamp knob and slide the fully assembled Universal Clamp over the vertical frame post. Tighten the knob until the clamp is firmly secured.
3. Repeat for the remaining three corners, ensuring all clamps are mounted at the same height.
4. Angle the clamps outward diagonally from the generator frame, typically at a 45-degree angle.
5. Measure the length and width from the end of one telescoping clamp rod (at the rod holder slot) to its opposing clamp.


Adjust the rod by depressing the spring-loaded button and extending the aluminum extender arm to achieve the target canopy dimensions:

Original Size Models: Target dimensions of 36" x 24".

XL Size Models: Target dimensions of 42" x 28".

For the exact clamp setting for your generator model, visit: www.gentent.com/clamp-setting



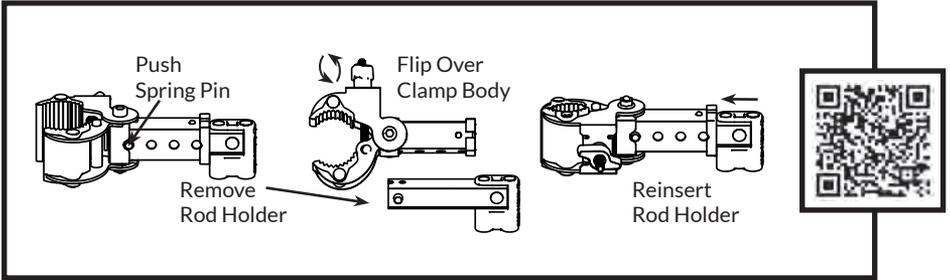


If the desired height or mounting location is obstructed, the clamp extension arm can be fully removed by depressing the spring button. The tightening knob can also be repositioned to the opposite side of the clamp to avoid interference with generator components.

For an exact fit for your generator model, visit: www.gentent.com/fit

If the desired measurements cannot be achieved due to a blocked frame, refer to the Blocked Frame Addendum for further guidance (page 7).

For additional assistance, consult the adjustment guide at www.gentent.com/fit/

Step 2: Installing the GenTent Frame

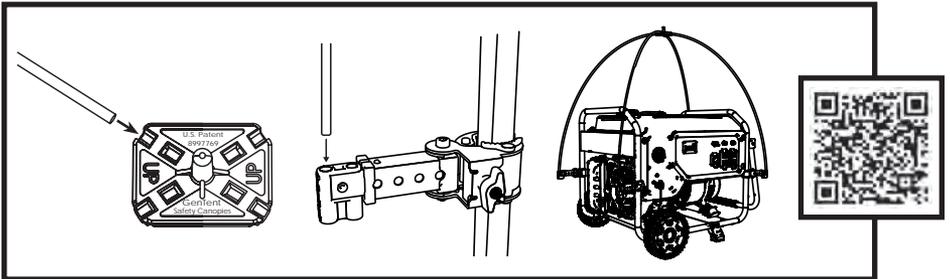


1. Orient the center connector with the vent pin facing upward. Position the connector to align with the generator's short and long sides accordingly.
2. Insert the first frame rod into the center connector, ensuring it is seated all the way in. Always insert the frame rod into the center connector before connecting it to the clamp.
3. Insert the other end of the rod into the nylon rod holder on the clamp extender arm.

CAUTION: Always grip the frame rods and center connector firmly during installation to prevent the whipping motion that can occur if a bent fiberglass rod is accidentally released.



4. Install the remaining frame rods into the center connector in a crisscross pattern. Grasp the free end of the frame rod firmly, then bend it toward the clamp and insert it fully into the correct hole.
5. Check the clamps to ensure the frame rods are fully seated. The clamp may show slight upward movement, which is normal.

Step 3: Covering the GenTent

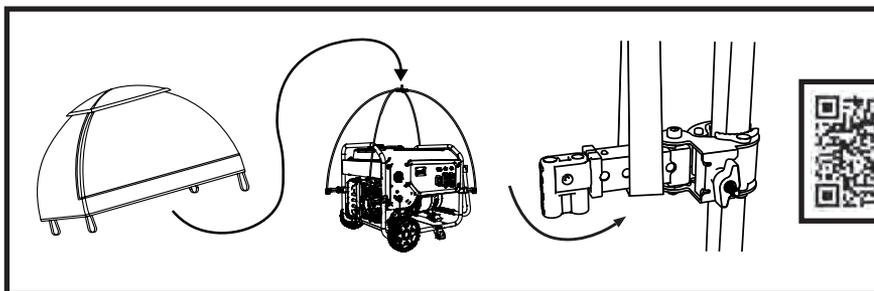


1. Open the GenTent canopy and place it onto the frame, centering the top cap on the center connector pin.
2. Ensure the canopy is positioned evenly and level across the frame.

WARNING: Never position the refueling door on the same side as the exhaust muffler, as spilled gasoline can lead to fire.




3. Slide one corner elastic under the telescoping clamp rod, sliding past the rod holder bushing and onto the main aluminum tube near the spring pin. Repeat for the opposite corners.
4. Adjust the canopy if needed to ensure it is level and properly secured.

Step 4: Installing the Electrical Panel Apron

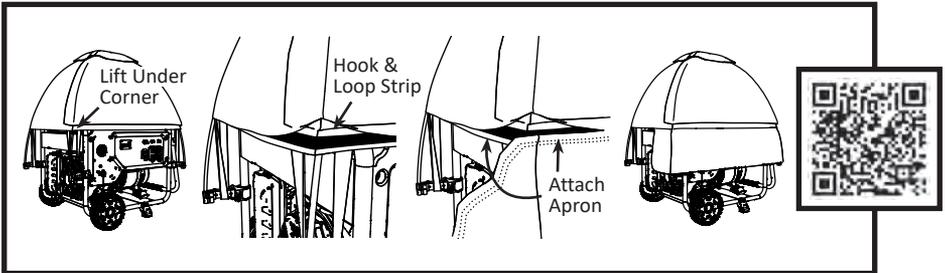


1. Flip up the over-flap along the bottom edge of the GenTent canopy to reveal the hook and loop trim. Position the electrical panel apron in front of the generator's electrical panel, ensuring it is at least 4 inches away from the exhaust.
2. Press the apron firmly onto the hook and loop, then flip the over-flap down over the apron to keep water running over the front, ensuring the electrical outlets stay dry.

WARNING: The GenTent canopy must be installed above the exhaust muffler, and the electrical panel apron should never block the exhaust.

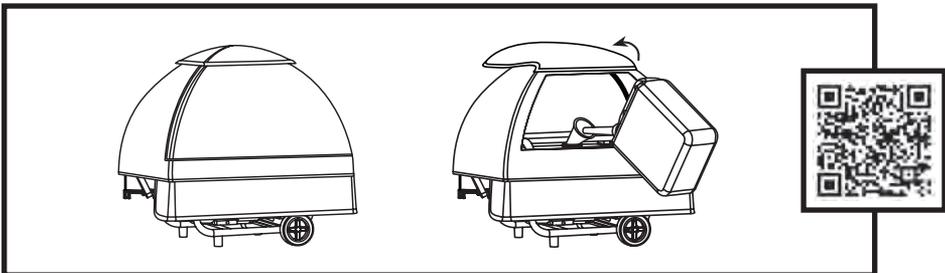

The GenTent refueling door is designed to allow you to easily refuel your generator without removing the GenTent. After use, the refueling door must be wrapped around the side and pressed firmly back in place. Failure to reseal the door may allow water to seep into the canopy.

Blocked Frame Addendum

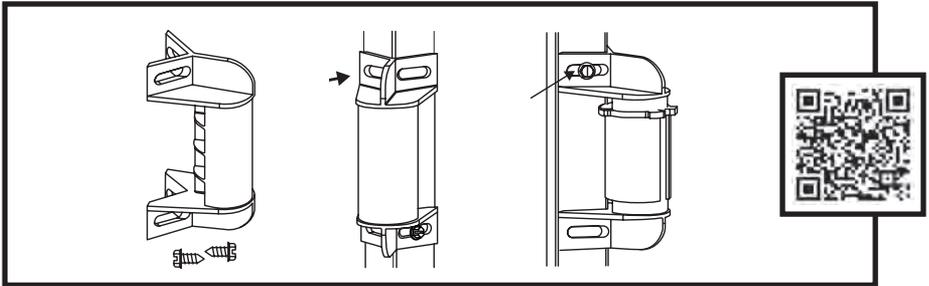

Most generators do not need adaptation. Generators that may require frame adaptation include:

Certain generator models may have multiple panels, welds, or crossbars that merge on a vertical frame post, and obstruct clamp placement. Most generators do not need adaptation. Should you need to adapt your frame, adaption kits are available separately at www.gentent.com, or by calling 781-334-8368.

For an exact fit for your generator model, visit: www.gentent.com/fit

Adapting the Frame:

1. Position the top screw hole slot of the GenTent Universal (GTU) adapter approximately 9" below the gas tank or 1/2" above the lowest electrical outlet—whichever is lower. This ensures optimal clamp placement.
2. Mark the generator frame at the center of the top screw hole slot on the GTU. Then mark the center of the diagonal screw hole slot across from the first.
3. Using a 5/32" drill bit, drill one hole at each of the marks on the generator frame.
4. Secure the GTUs to the frame using the provided sheet metal screws and a 5/16" nut driver or flathead screwdriver.
5. After the GTU adapters are installed, follow the steps from the "Setting Up the Clamps" section to install the GenTent Universal clamps.

Did you purchase directly from GenTent.com?



You're all set — your product is already registered!

Purchase elsewhere?

amazon

Walmart

LOWE'S

THE HOME DEPOT

THIS
country.com

FactoryPure

ELECTRIC GENERATORS
DIRECT

RED
GENERATORS

MAX
Tool

Complete your quick and easy registration online at:

www.gentent.com/register



Registration Ensures:

Product warranty activation



Important safety and product updates



Exclusive offers for registered customers



We never share your contact information

Need Help? Questions? Returns or Exchanges?

We're here for you!



Email: support@gentent.com



Call: 781-334-8368



Videos & Guides: www.gentent.com/installvideos



Send us your installation pictures.
We're happy to offer feedback and tips!

